




- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

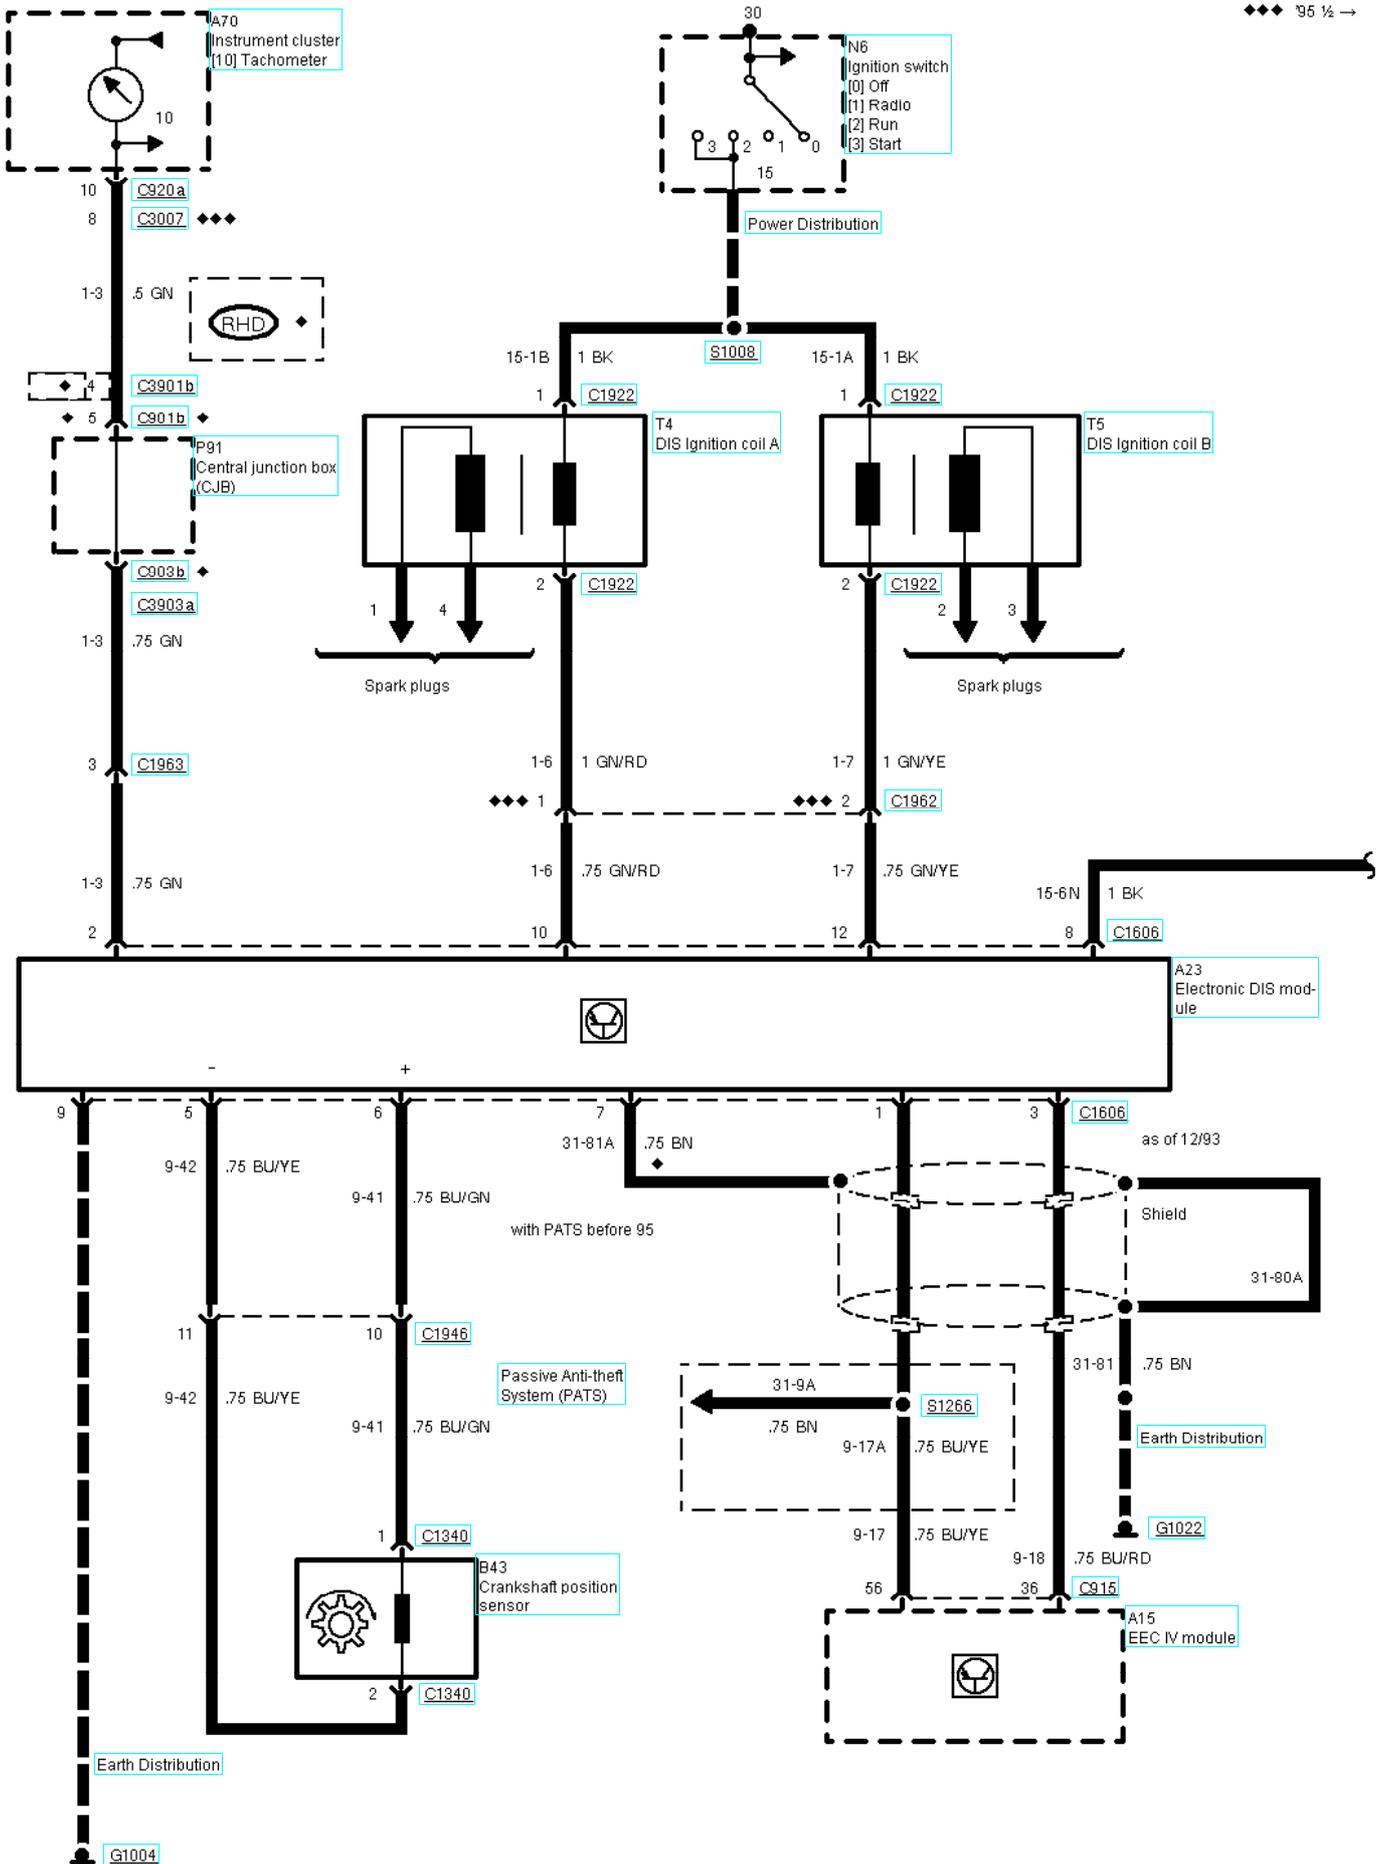


- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

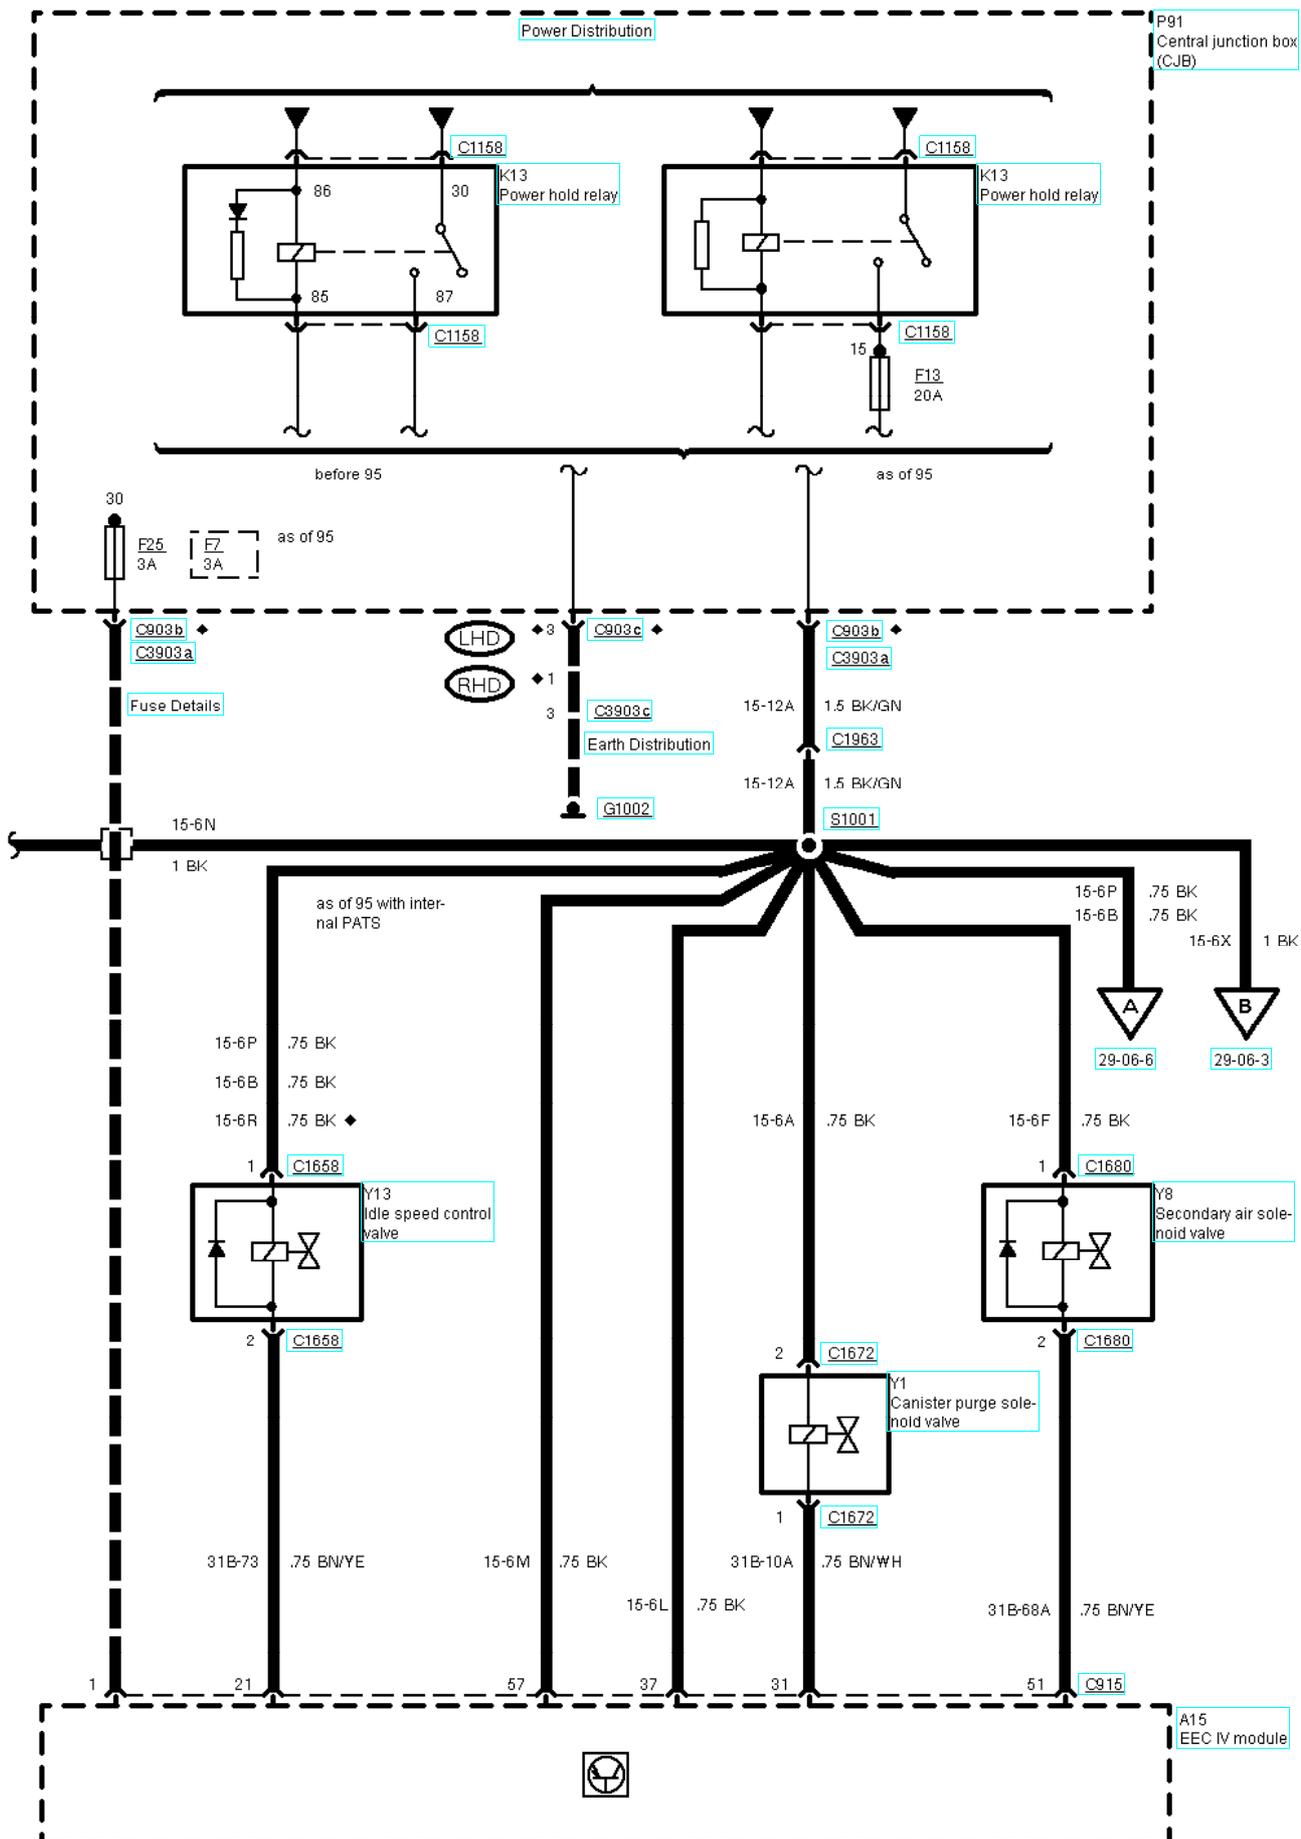

- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

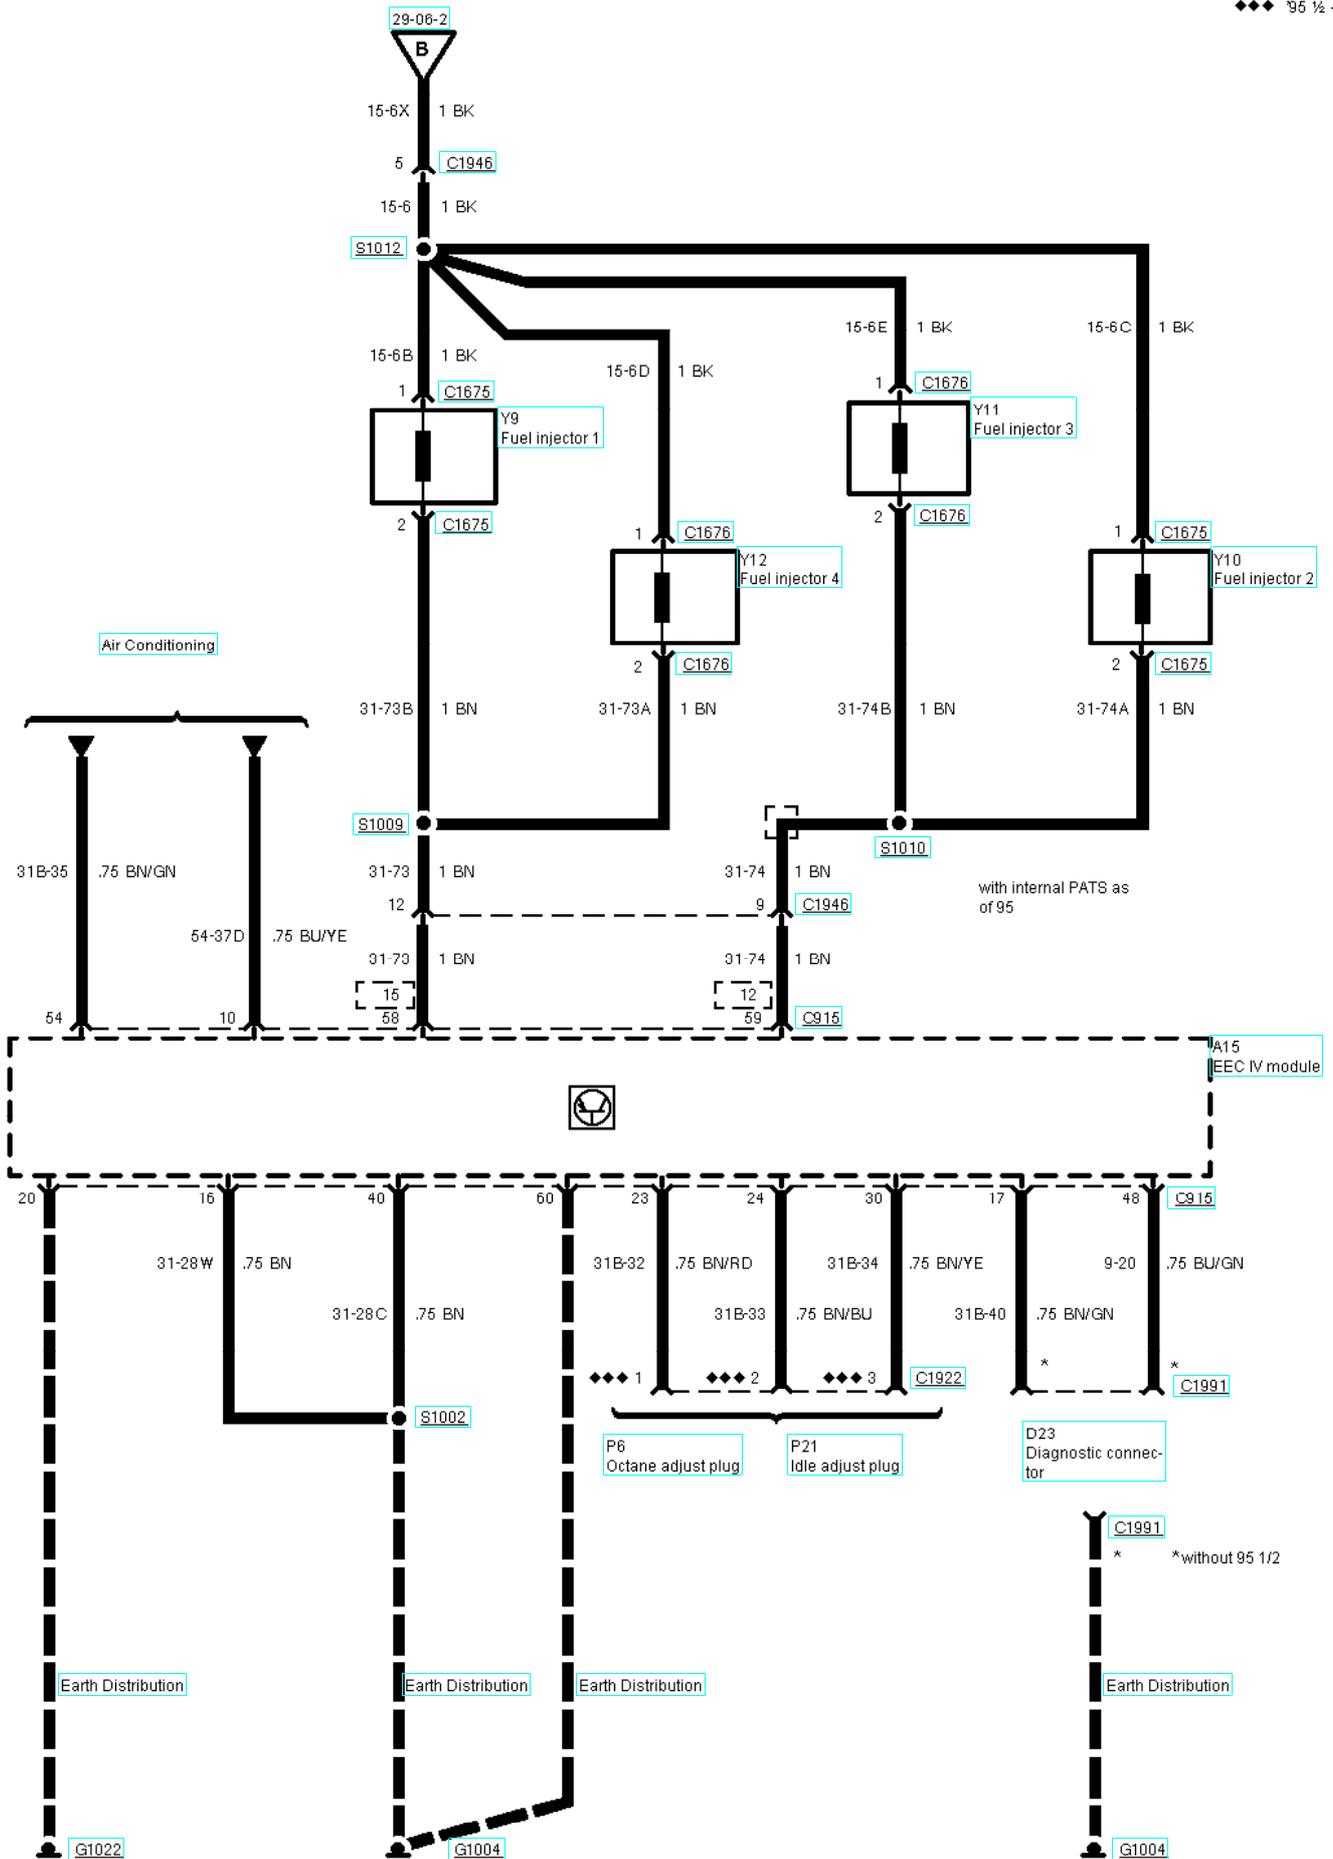



- ◆ → 95
- ◆◆ 95 → 95 ½
- ◆◆◆ 95 ½ →

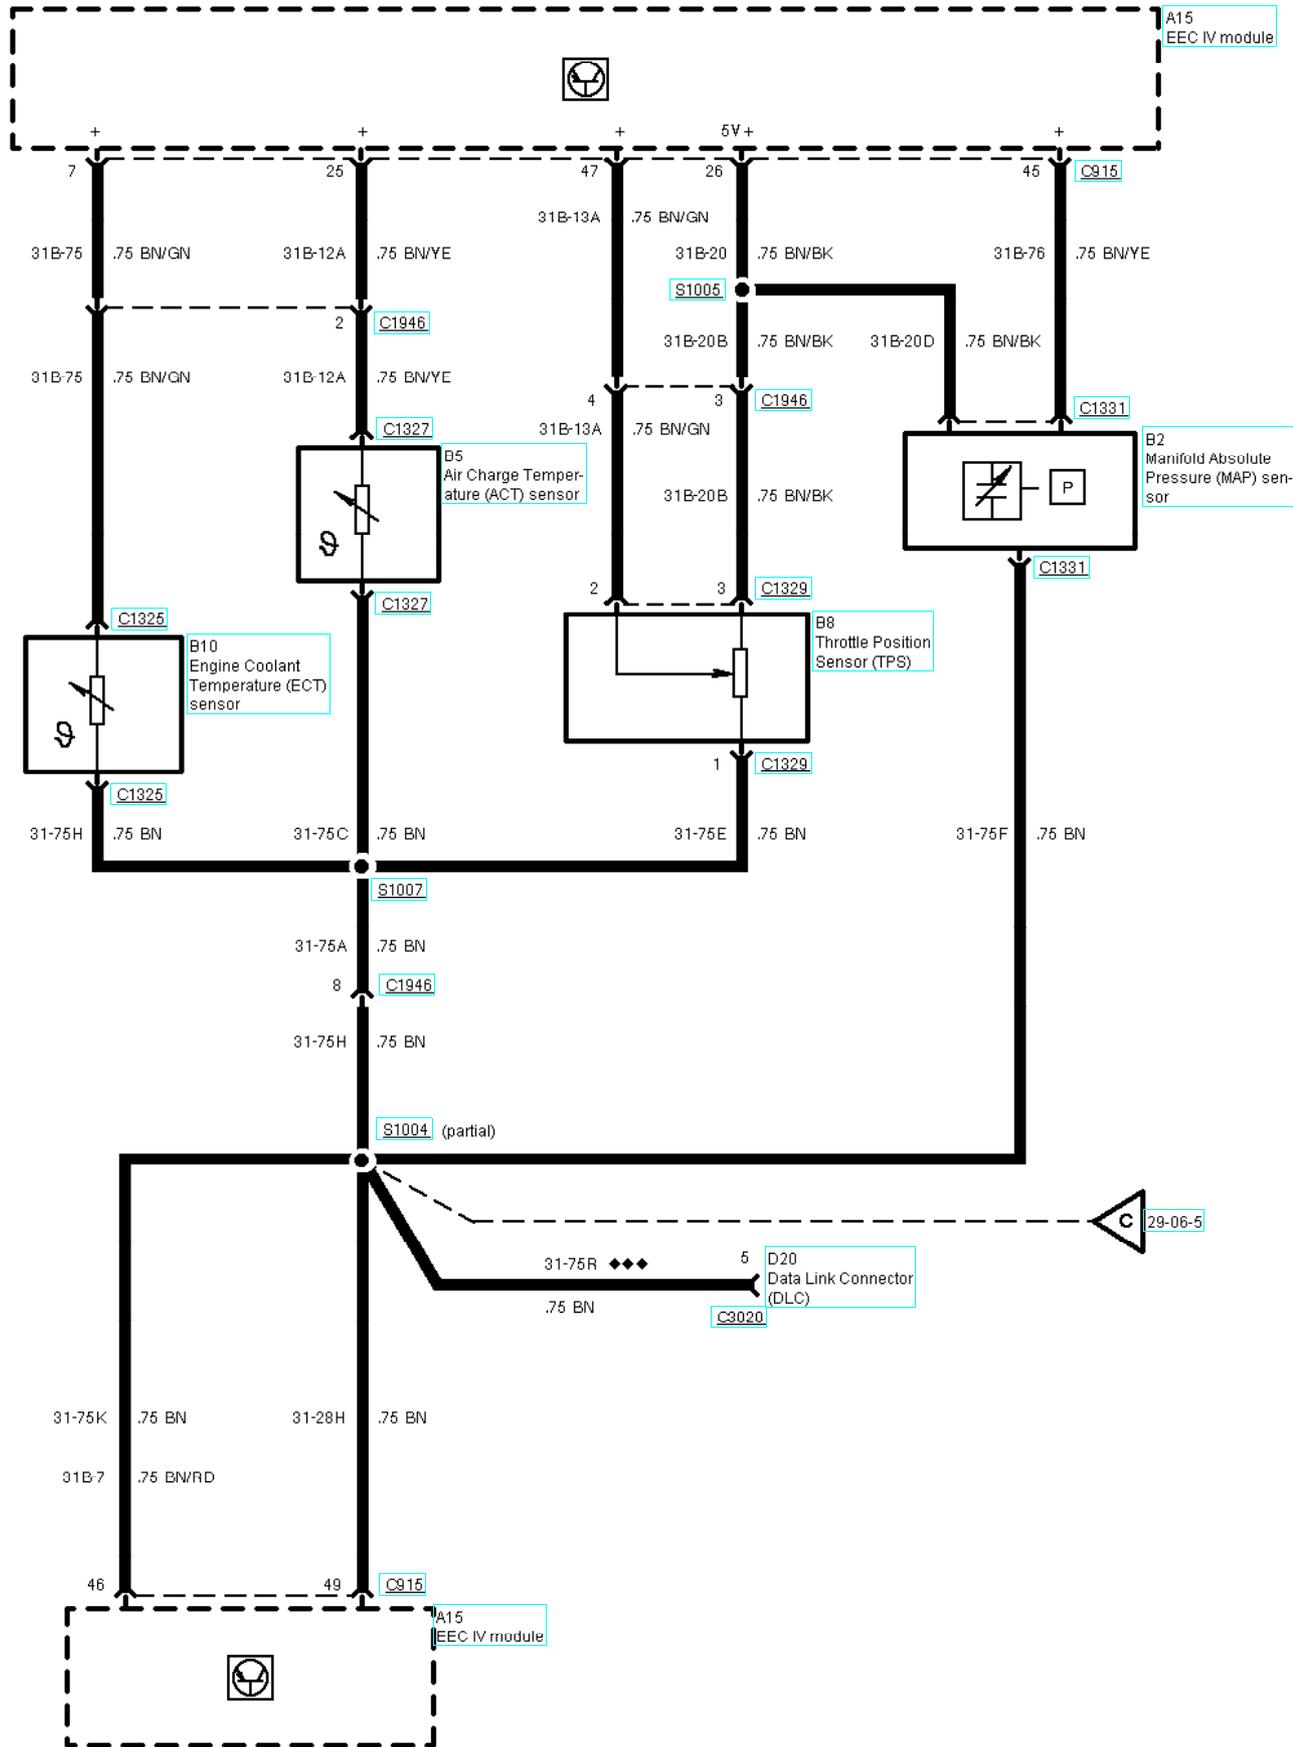

29-06-5


- ◆ → 95
- ◆◆ 95 → 95 ½
- ◆◆◆ 95 ½ →

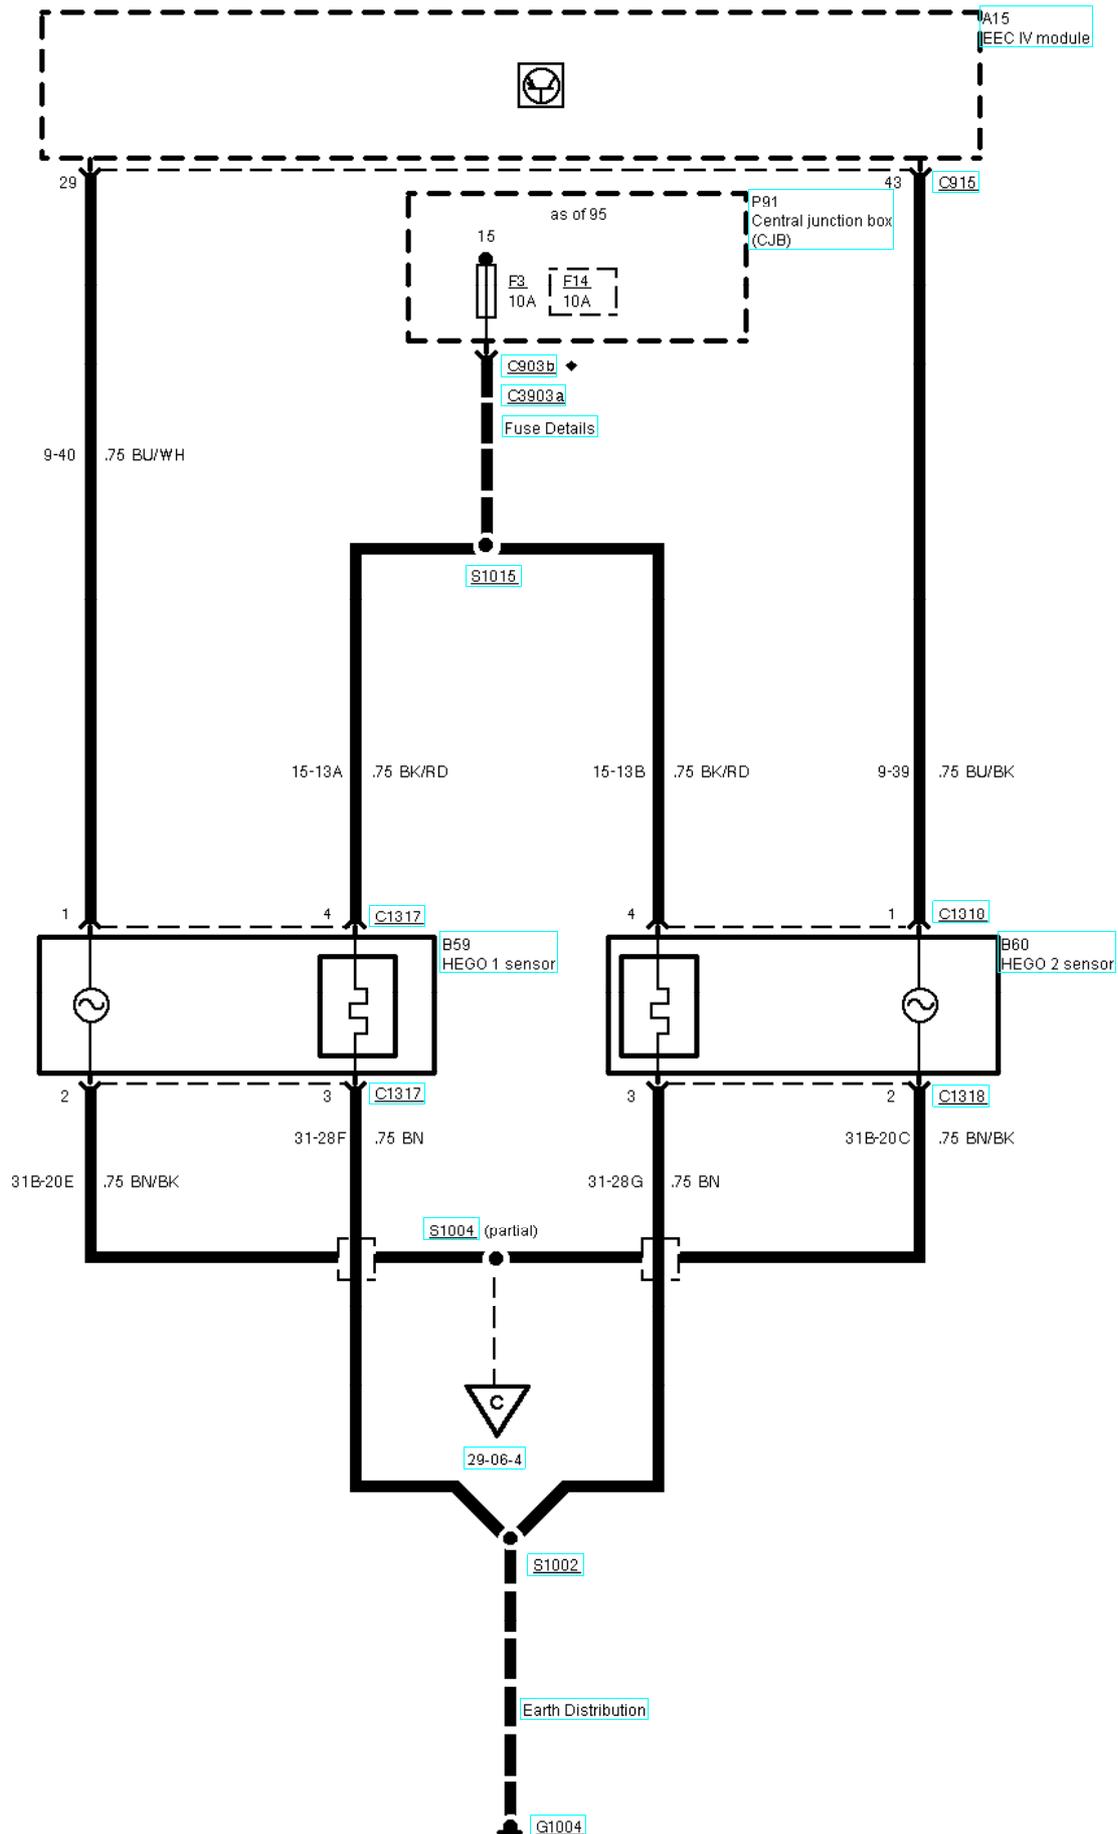

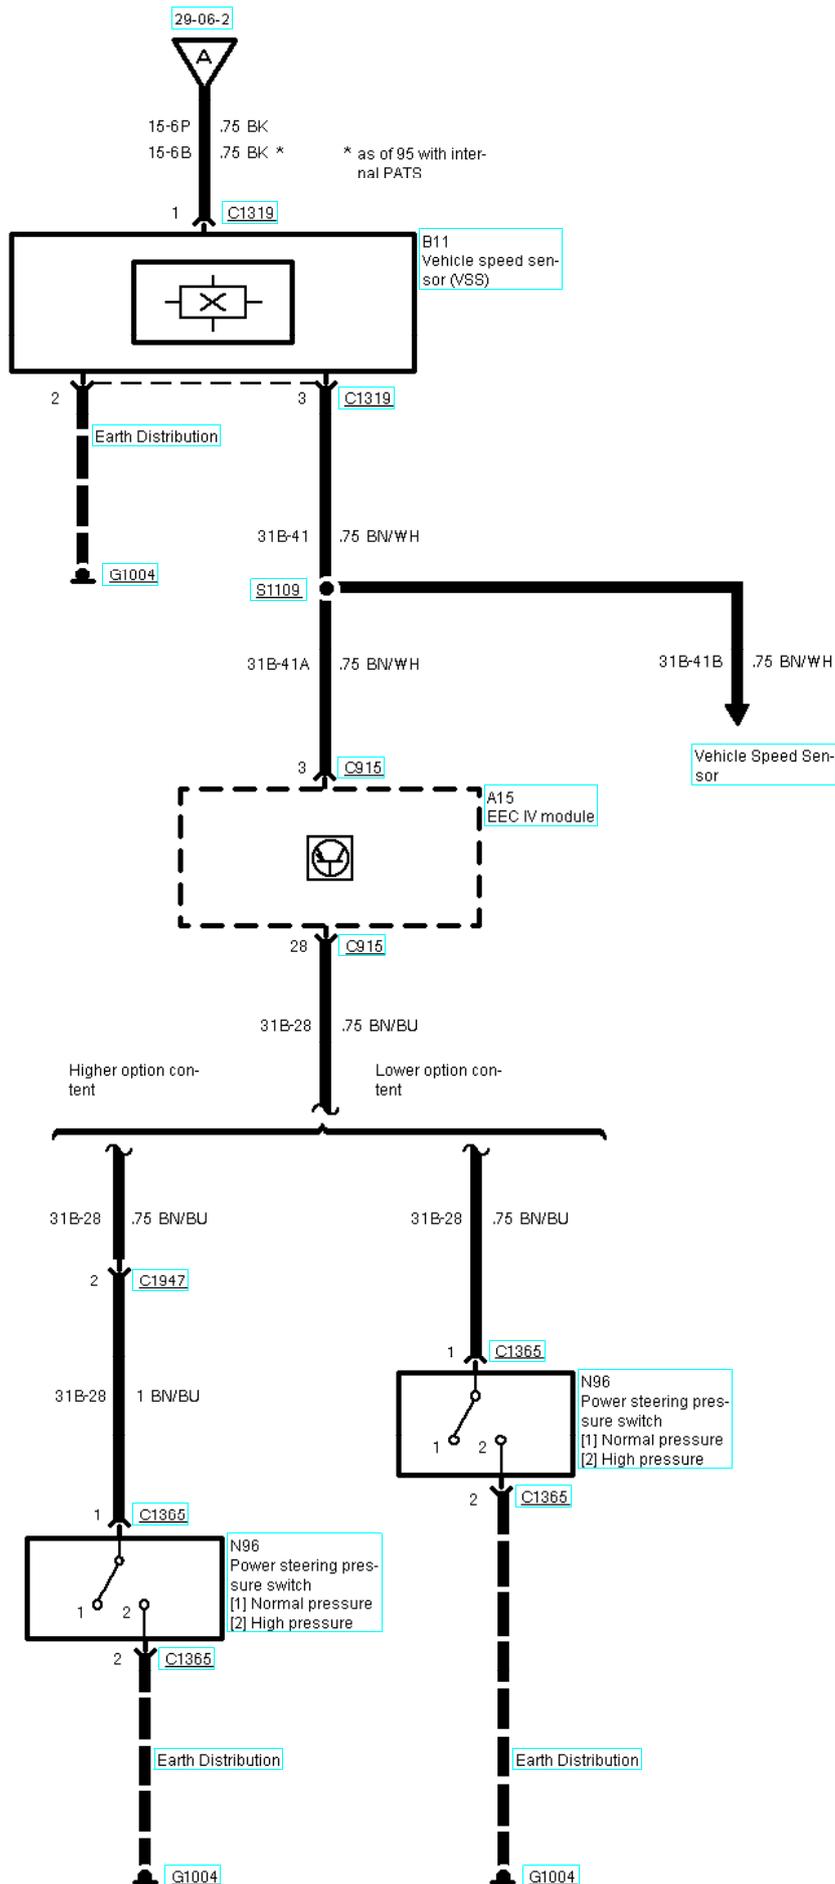


29-06-007, Engine Control 2,0 I EFI, Fuel pump, except 4x4






- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

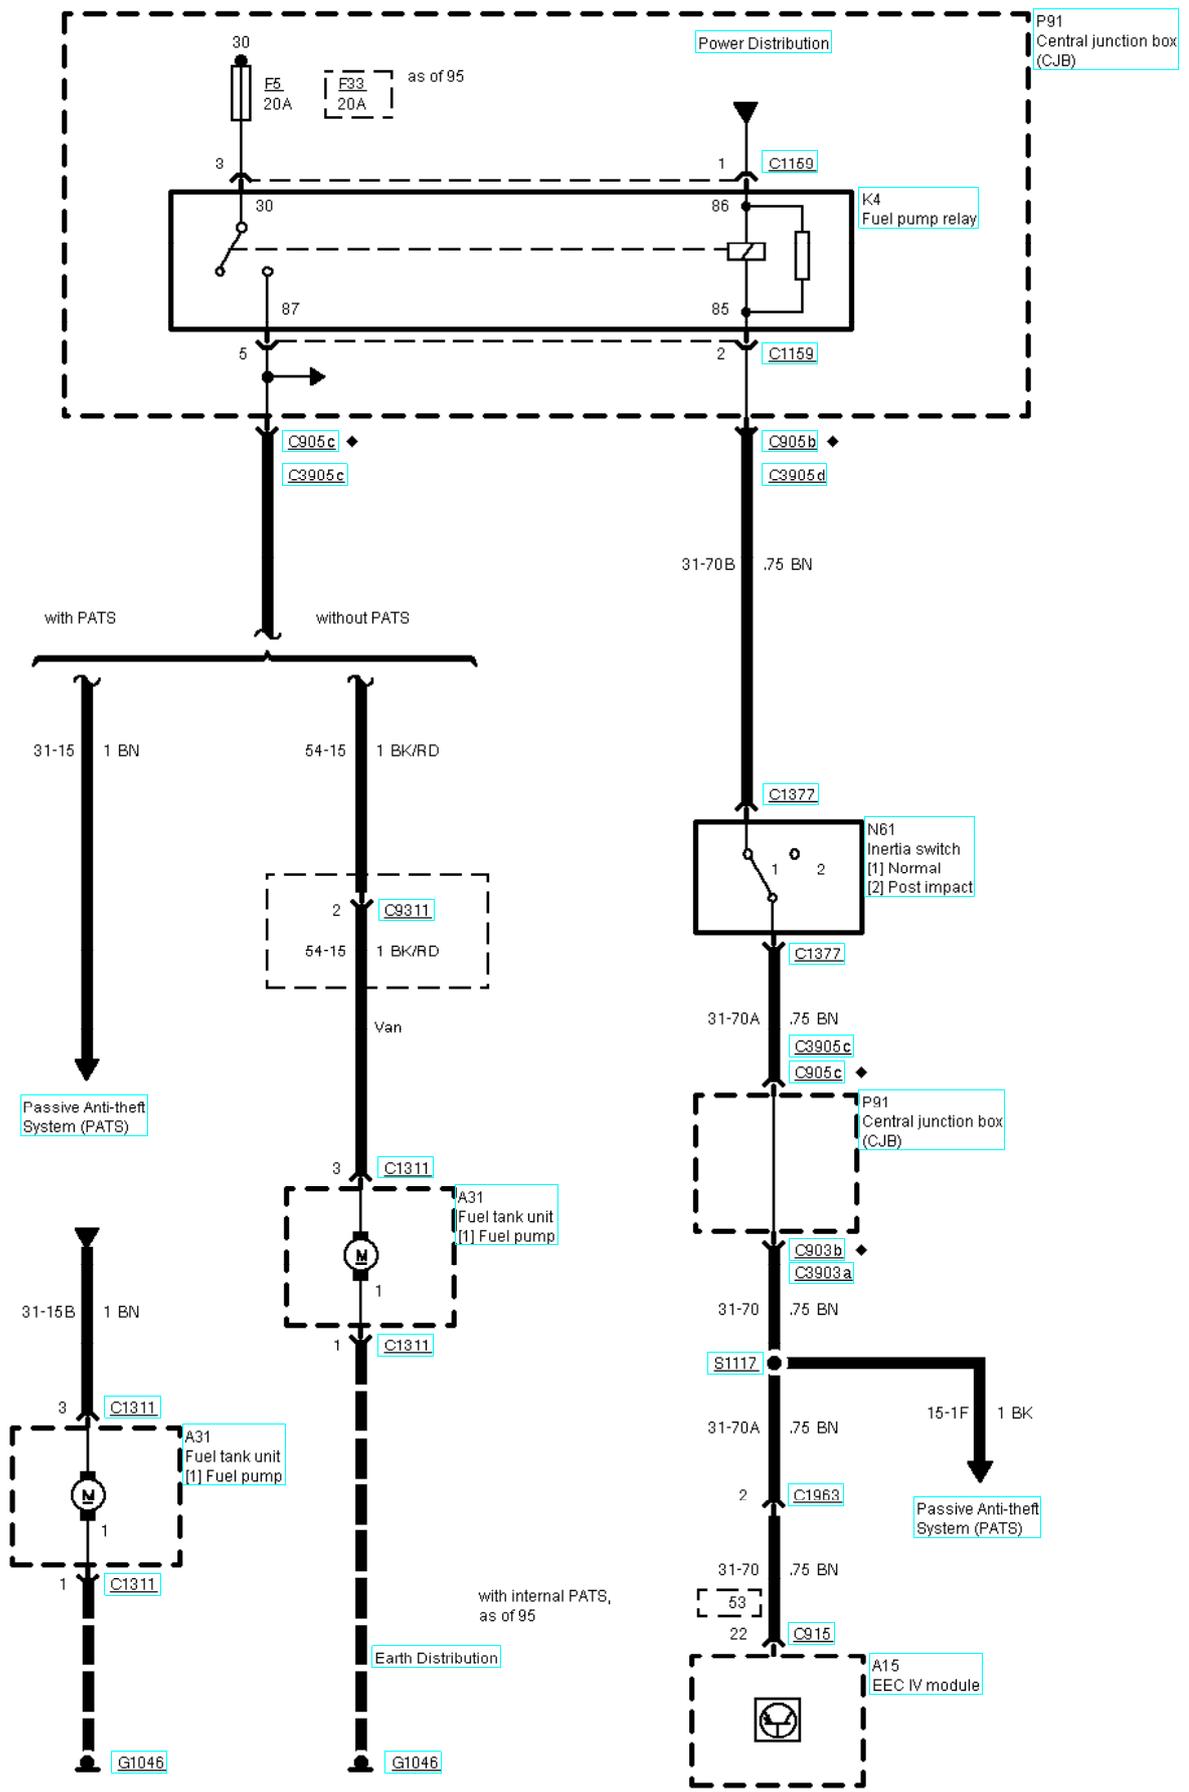


29-06-008, Engine Control 2,0 I EFI, Fuel pump, 4x4

- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

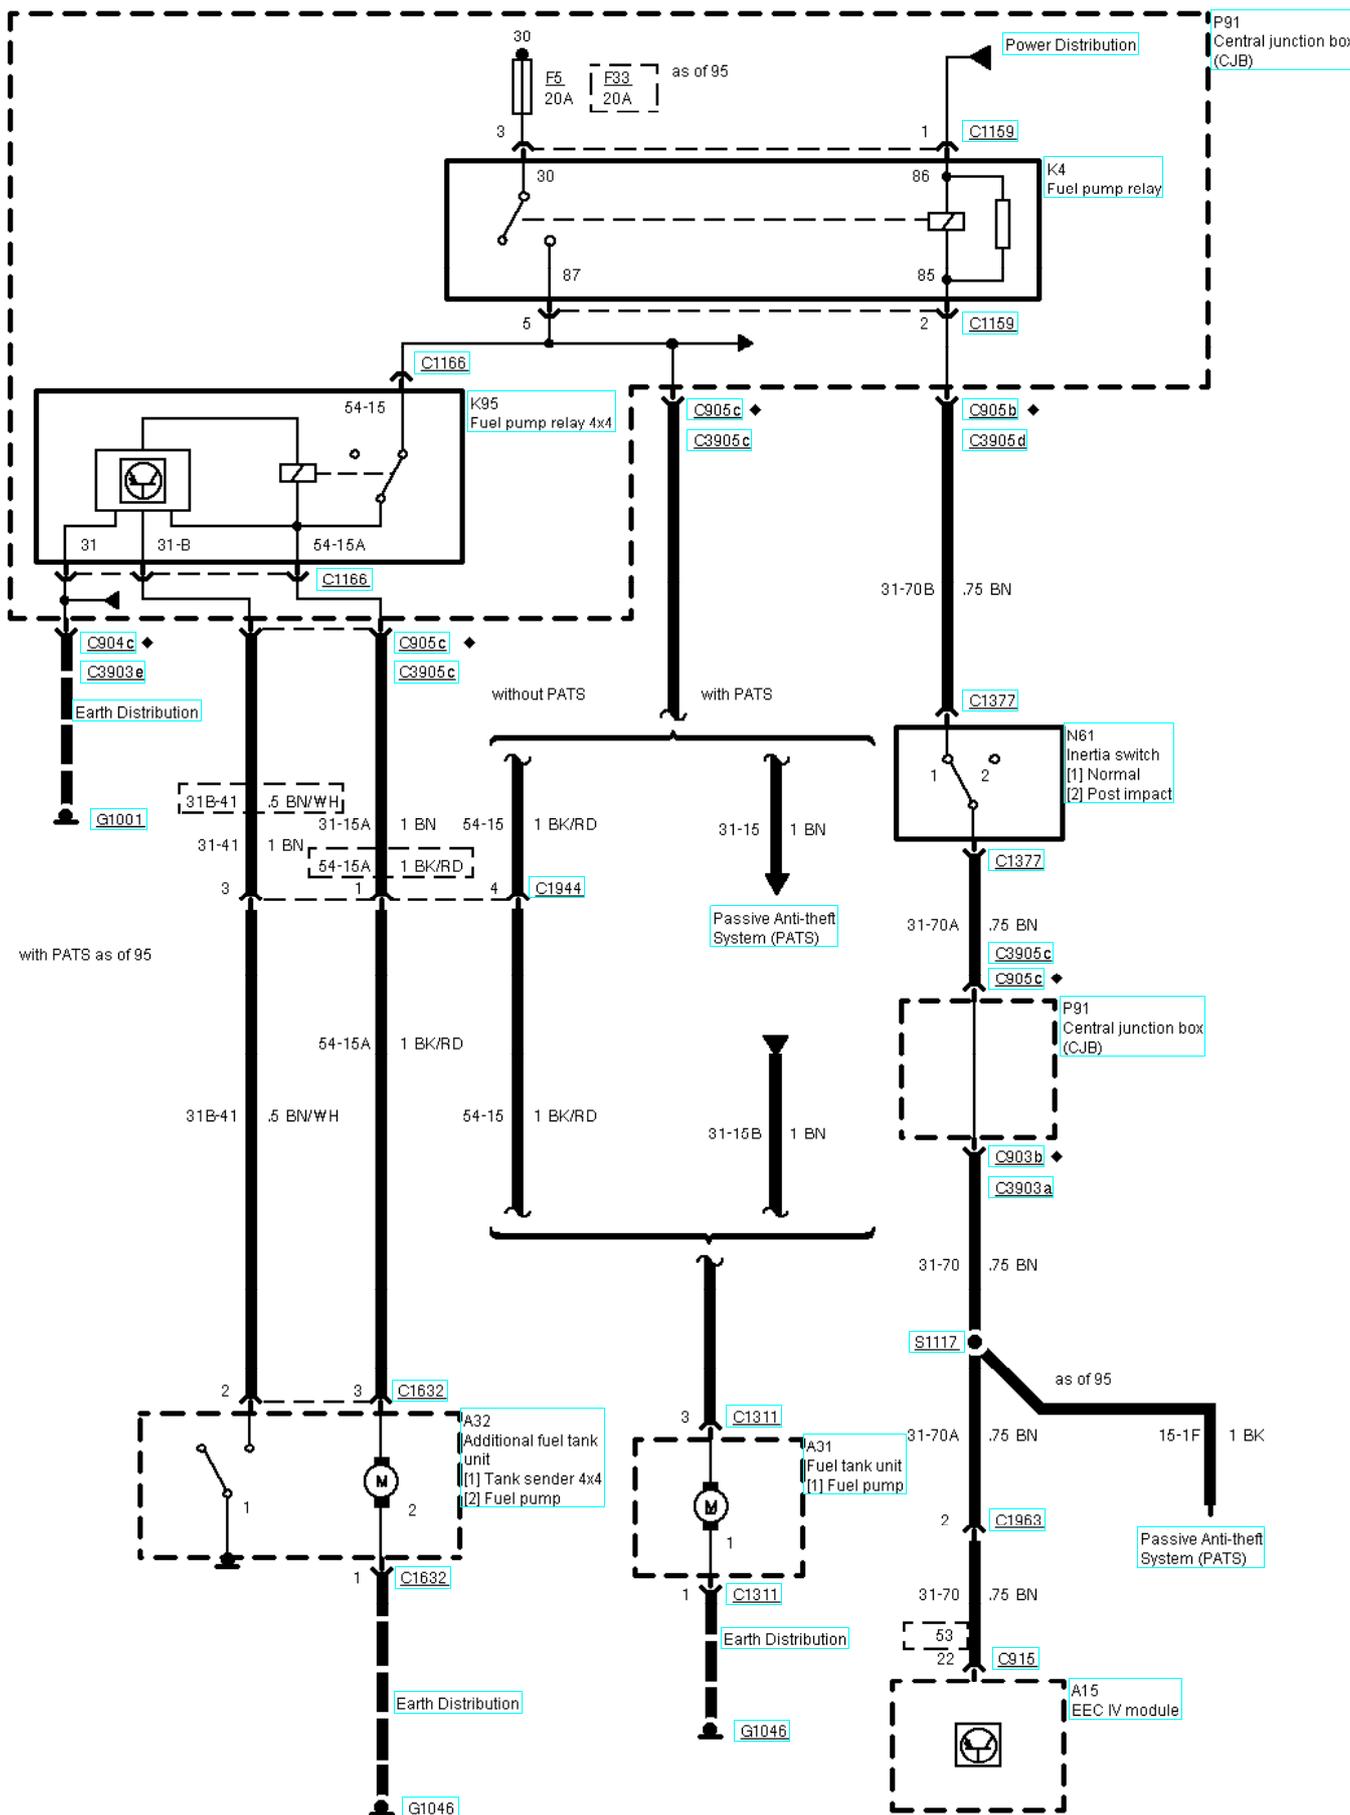


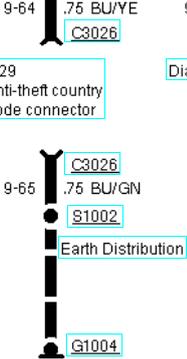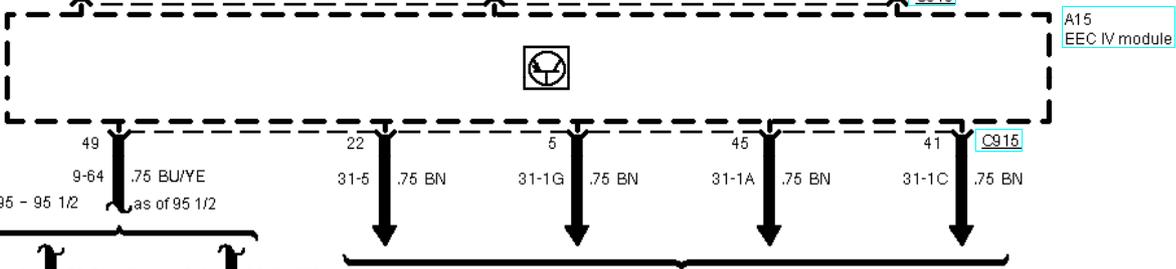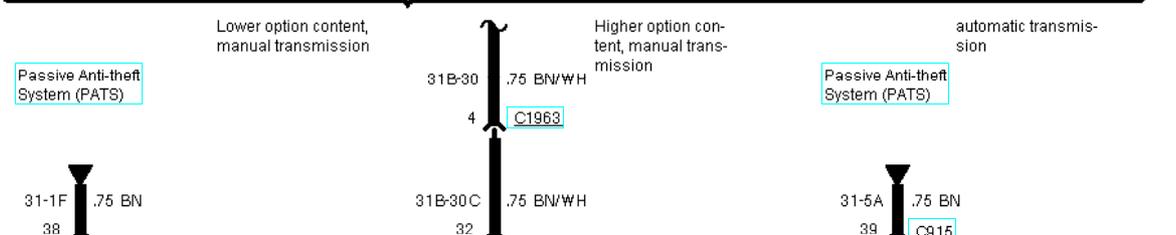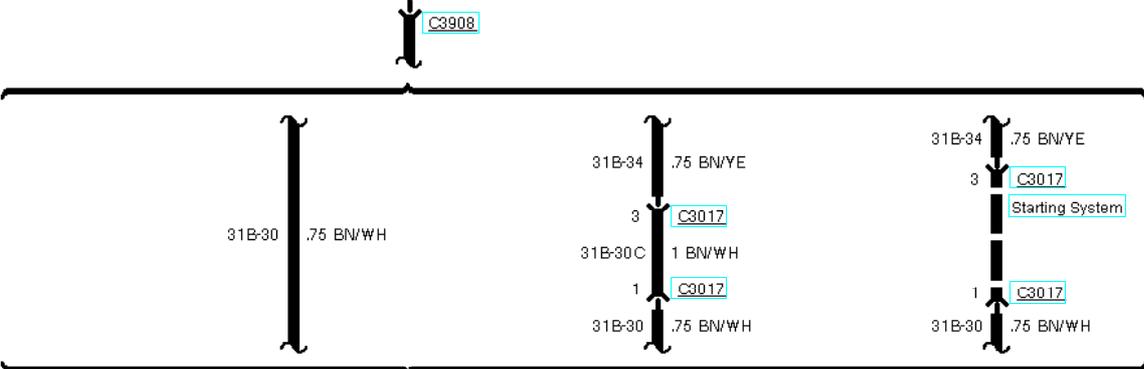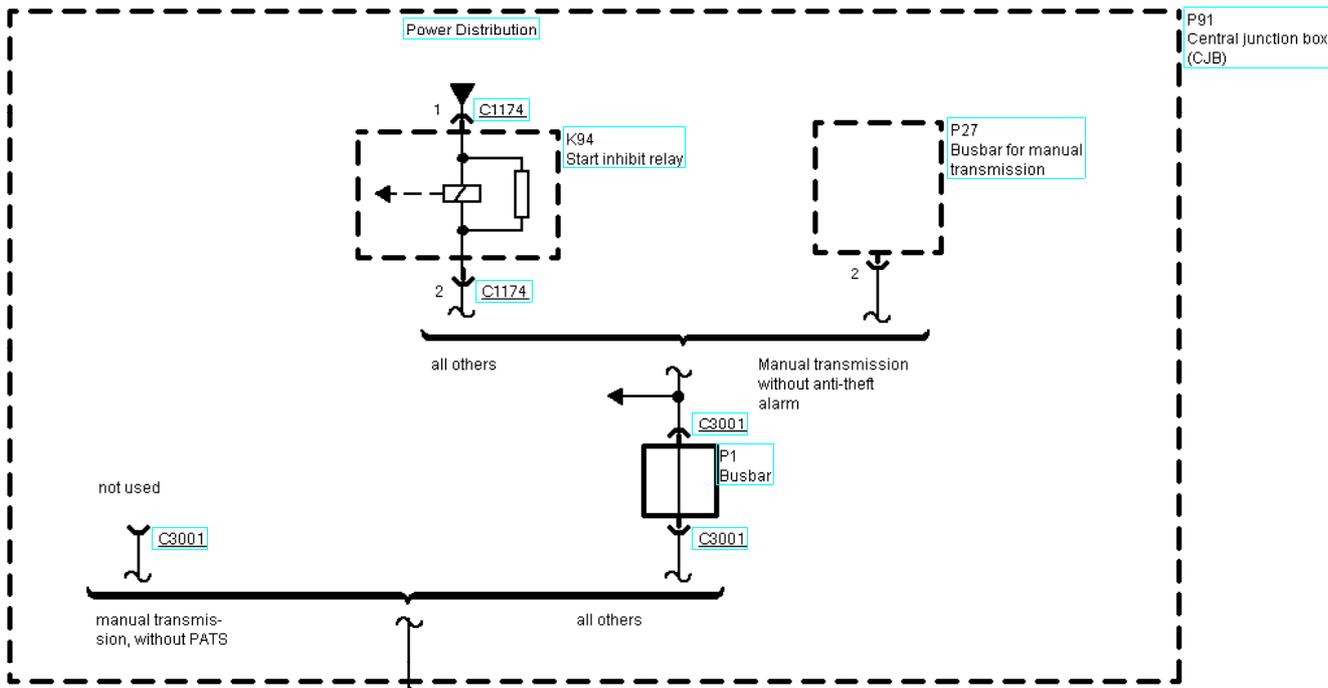

- ◆ → 95
- ◆◆ 95 → 95 1/2
- ◆◆◆ 95 1/2 →

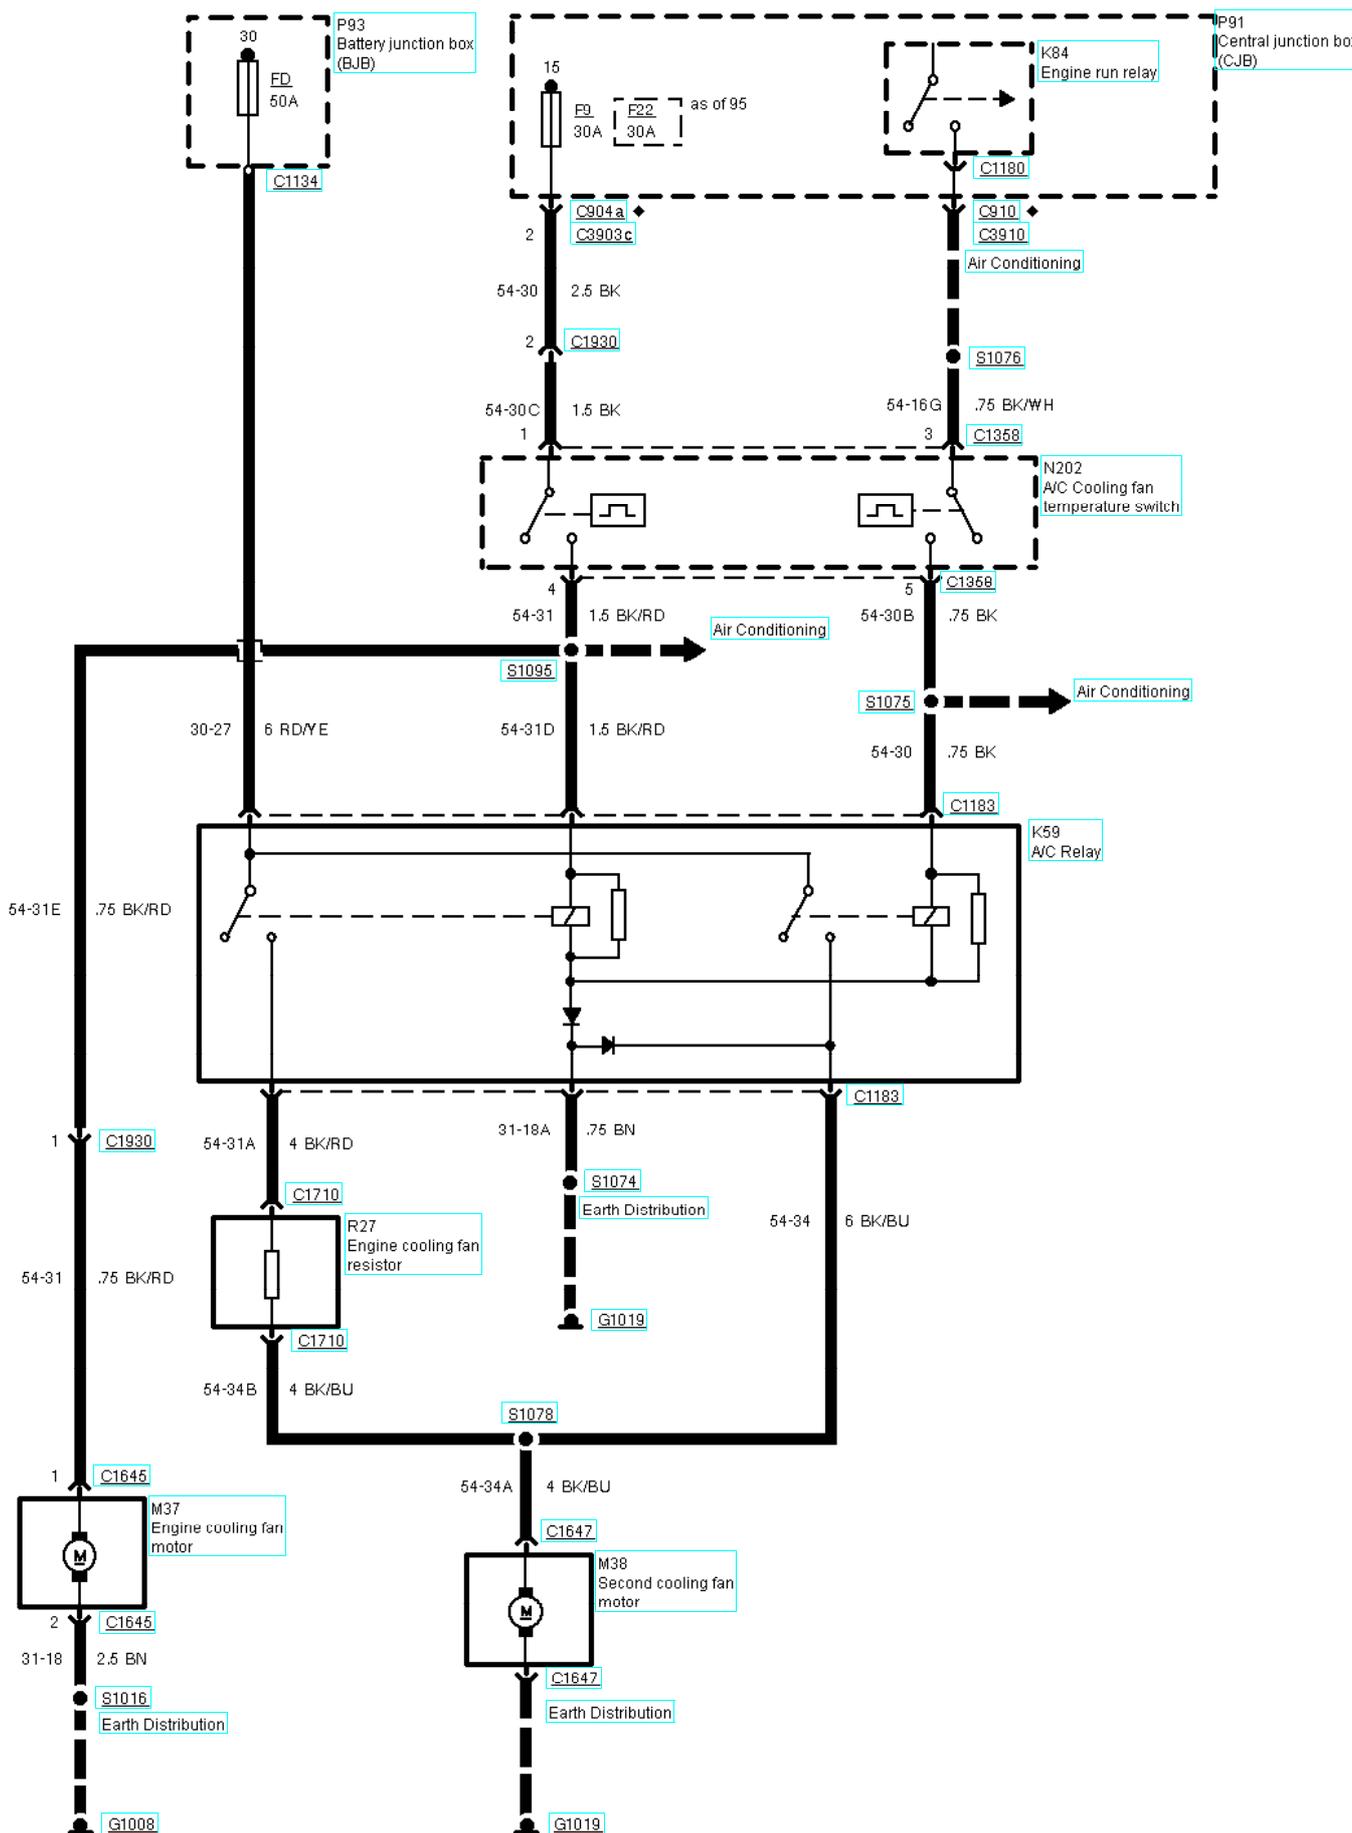

- ◆ → 95
- ◆◆ 95 → 95 ½
- ◆◆◆ 95 ½ →

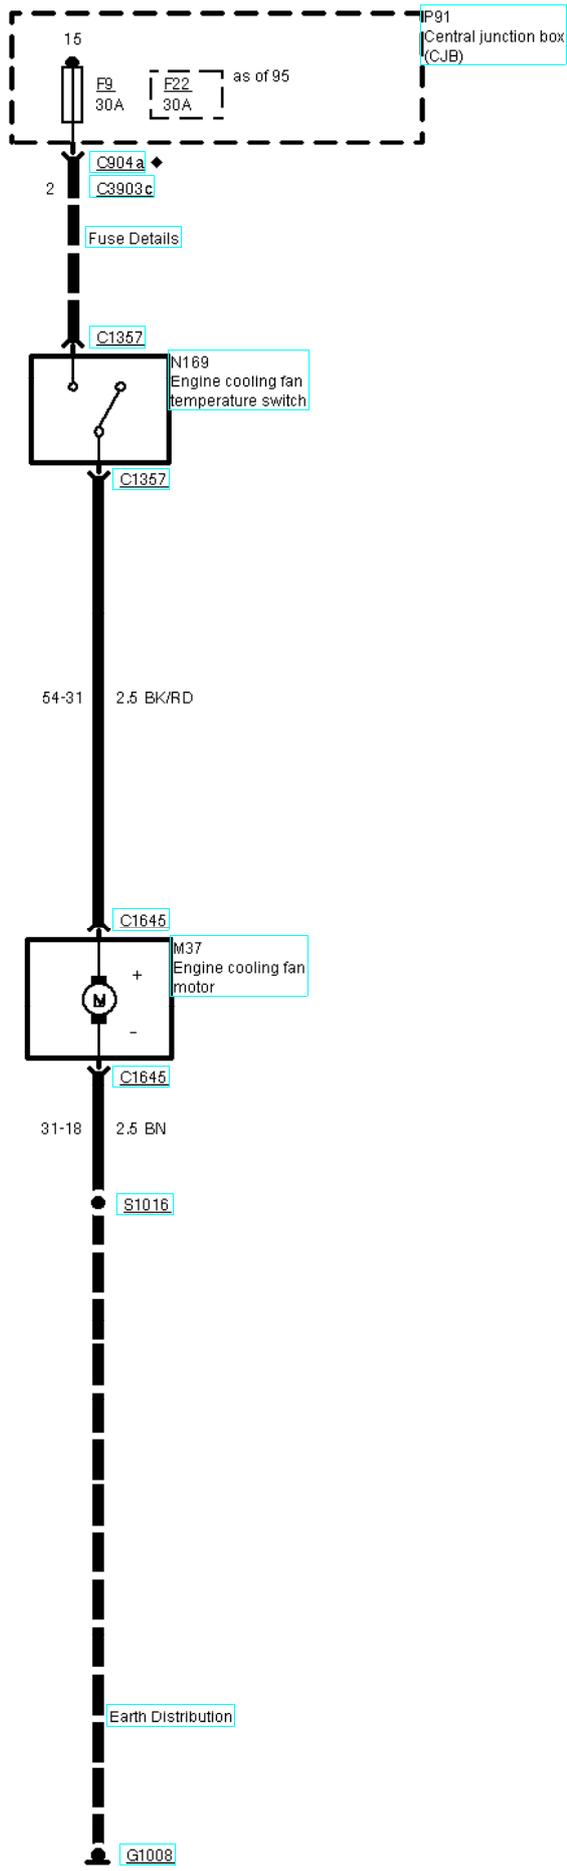

➤ Circuit Description
